


MK Çıkış Kutusu Montaj Talimatı (16 A) MK Tap-Off Box Installation Instructions (16 A)

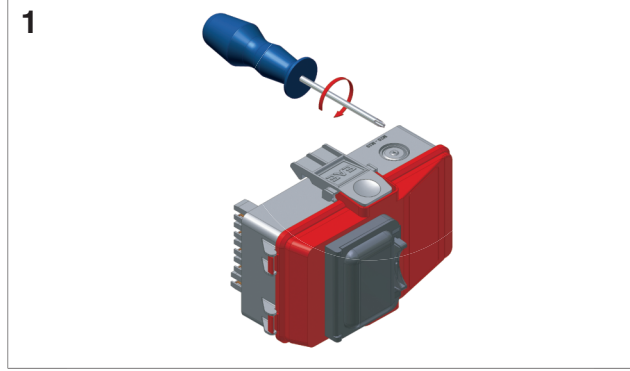


Kapak vidalarını sökünüz.

Remove the cover screws.




Kapağı açınız.

Open the cover.

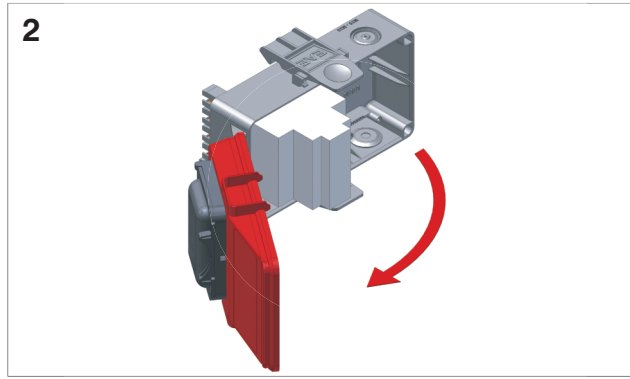


3- Şalter akımınıza uygun kesitteki kabloyu; kutuyu busbara monte etmeden önce şalterinize bağlayınız.

Connect a cable, which has suitable cross section, to the switch, before you install the box to the busbar.

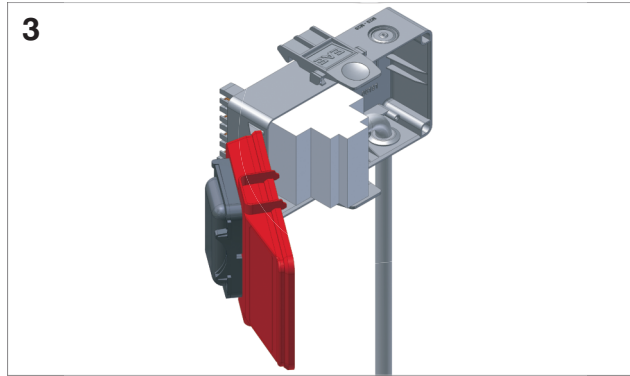




4- Söktüğünüz kapak vidalarını takınız.

Tighten the removed cover screws.

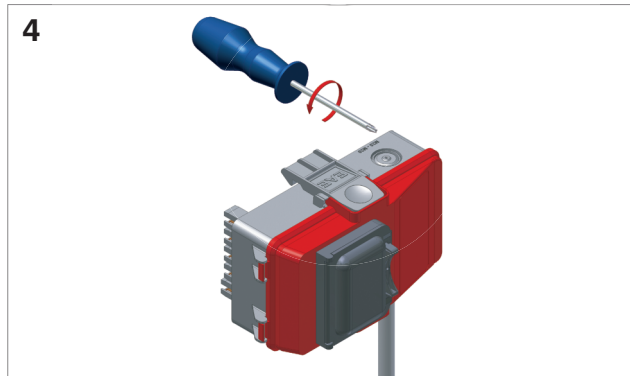


Kutu kontaklarını kanal priz bölgesine eksenleyerek yerleştiriniz.

Fix the box contacts to the busbar plug area by aligning them.

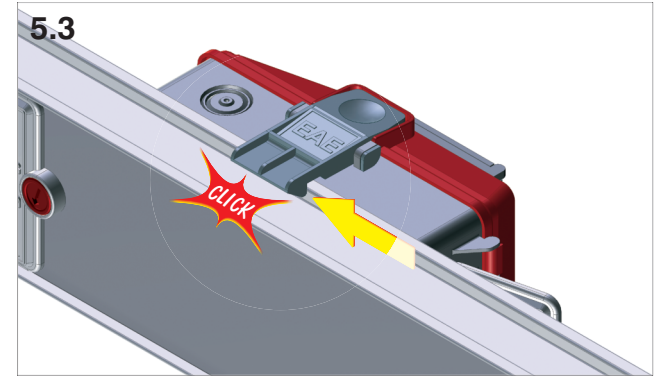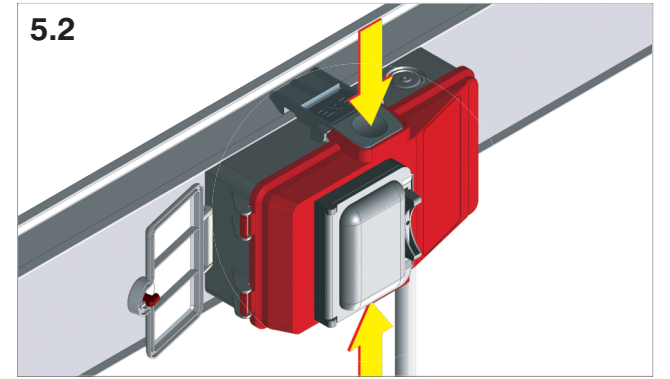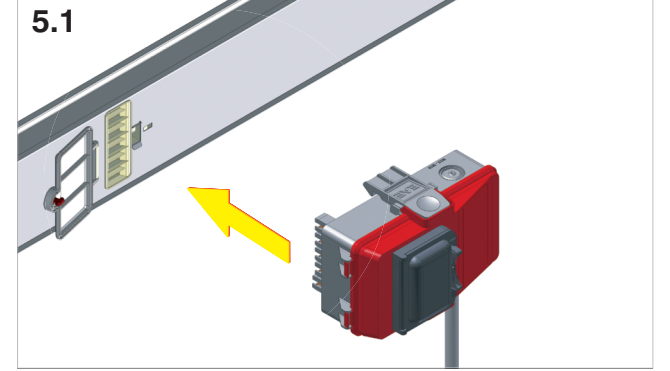

Kutunun busbara kenetlendiğinden emin olunuz.

Be sure that, the box is fixed to the busbar properly.

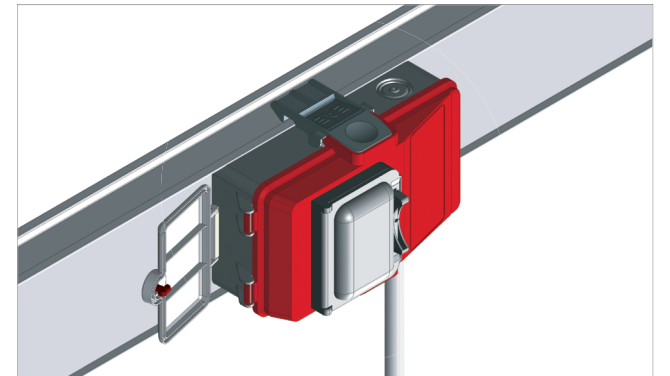

- Boş çıkış kutularının kullanımını kolaylaştırmak için, MCB'ye bağlantı kabloları dahil olarak üretilmektedir.
- Boş çıkış kutuları monofaze kullanıldığında; boşta kalan diğer iki bağlantı kablosunun uçlarını, güvenliğinizi için kutu içerisindeki sıra klemensleri ile izole ediniz.
- Plug-in busbar kullanımında, busbar hatlarının dengeli yüklenmesini sağlamak için, çıkış kutularının faz dağılımına dikkat ediniz.

- Empty tap-off boxes are produced with MCB connection cables.
- When the tap-off boxes are used as monophase, the switch will be connected to one of the phase cables. Remaining phase cables should be insulated by using cable terminals for your safety.
- In order to balance phases of busbar, connected loads to the tap off boxes should be calculated carefully.